

We have moved - Effective 2/7/04

Combi

Combi USA, Inc.

1962 Hwy 160 W, Ste. 100
Fort Mill, SC 29708

1-800-99-COMBI M-F 8:30am-5pm EST
803-548-3663 FAX

New SC
Sales Tax
is 5%



Manual

Ultra Savvy™ 2730 Series

Acoustic Canopy Patent Pending

Perfect Match™ Stroller COMBI


Be sure to carefully read this instruction manual **before** using the product to ensure proper use of the stroller, and keep it for future reference. Record the following information for quick reference.

Date Purchased: _____ Model Number: 2730 - _____ Color _____
Located near the rear right leg.


Parts List

Fabric Pattern _____


Make sure you have all the parts listed below before using your stroller. If any parts are missing, call Customer Service at 1-800-992-6624.

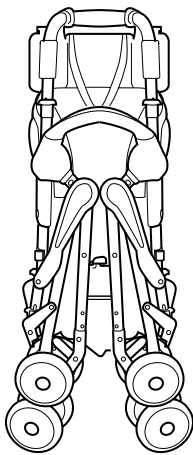

Main Body

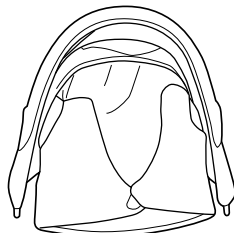


Canopy

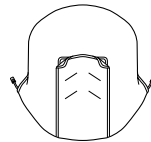

Infant car
seat cover



Infant car seat
canopy cover



Perfect Match™ Guardrail





Stroller Pack

Speakers
in a Box

Warranty Card


Instruction
Manual

Name of Parts

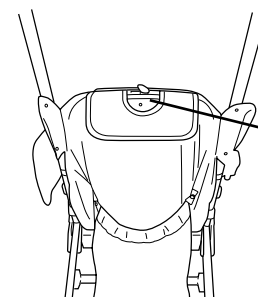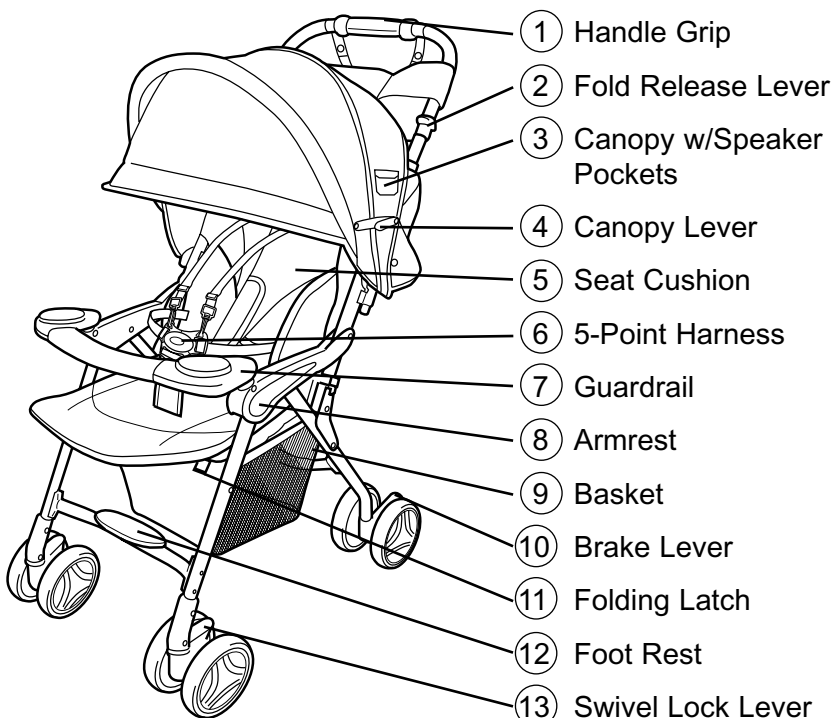

14 Reclining Lever

Back of Seat

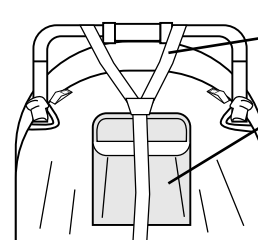

15 Carrying Strap

16 Player Storage
Pocket

Back of Canopy

WARNINGS For your child's safety:

If your stroller is not used in compliance with these instructions, serious injury may result.



WARNING

AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT. ALWAYS USE SEAT BELT



WARNING

NEVER LEAVE CHILD UNATTENDED.

*In the event of damage or problems, discontinue use and contact **COMBI Customer Service** for instructions: 1-800-992-6624.*



WARNING

DO NOT LIFT AND CARRY the stroller while open with a child in it. The stroller may slip.



WARNING

Do not use the stroller on steep slopes, stairs, escalators, beaches, rough roads, mud, etc.

WARNING

DO NOT ALLOW CHILD TO LEAN OVER SIDES OF STROLLER. IT MAY BECOME UNBALANCED AND TIP OVER.

WARNING

Excessive weight in basket (or items placed in basket which overflow the top or side of basket) may cause a hazardous condition to exist.



WARNING

Do not allow your child to stand in or on the stroller.



WARNING

Do not put or hang things on the canopy or handle because it could cause the stroller to become unbalanced or tip over.

WARNING

Do not load more than 9 lbs. (0.9kg) in the basket. Do not load more than 2 lbs. (0.9kg) combined weight in the bottle holder (including bottles and contents).



WARNING

Never carry more than one child in the stroller. Do not allow a child to ride or sit on areas of stroller other than seat. **Maximum weight of child: 45 lbs. (20 kg)**



WARNING

Always engage both brakes when parking the stroller.

CAUTIONS:

1. Improper usage or lack of knowledge regarding the instructions can result in dangerous situations or personal injury or damage to the stroller.
2. Completely remove all plastic bags and packing materials before using this product to prevent a possible choking hazard.
3. Push the stroller at a normal walking speed only.


Questions or Concerns
check our website:

www.combi-intl.com

COMBI 


- 1 -

Opening the Stroller

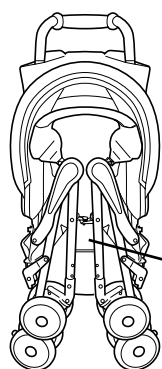


Folding latch

1. Release the folding latch by lifting up.

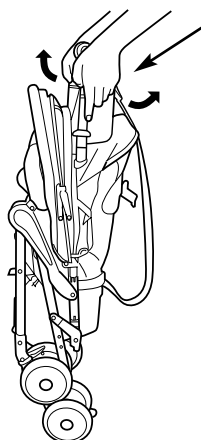


Holding the handle bar from underneath will make it easier.

2. Grip the handle bar on each side and turn outward to open fully.

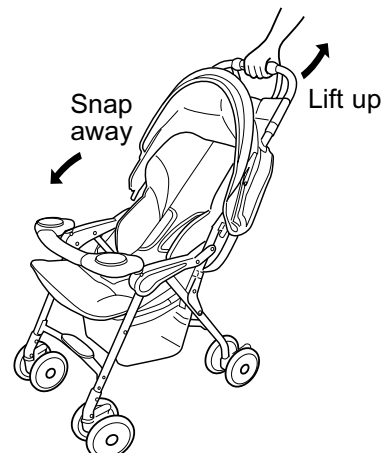

3. Lift up the handle bar and snap the stroller away from you.

Attaching the Canopy

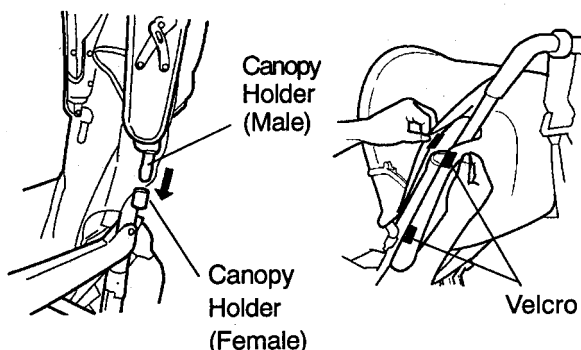

Canopy Holder (Male)

Canopy Holder (Female)

Velcro

CAUTION

Failure to fully secure the canopy holders can cause the holders to bend. When storing the stroller by laying it down, be sure the canopy is off the ground to prevent it from bending.

Attaching the Canopy


1. Confirm the canopy is facing in the proper direction.
2. Fully insert the canopy holder (male) to the canopy holder (female) until a click is heard.
3. Fasten the canopy velcro on both sides around the handles to the seat back velcro (2 places.)

Removing the Canopy



Pull the velcro apart and squeeze the bottom of the canopy holder (male). Lift the canopy until it releases from the female holder.



Installing the Speakers

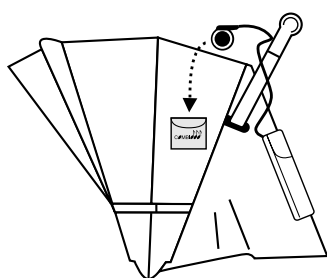

1. The canopy comes with a small pocket on each side. Insert a speaker in each pocket.
2. The canopy has a storage pocket in the back. Place your portable CD, cassette, mini-disc or MP3 player inside the back pocket.
3. Insert the (2.8mm) mini plug into the player. Turn on your player.

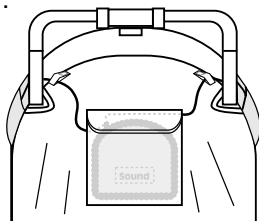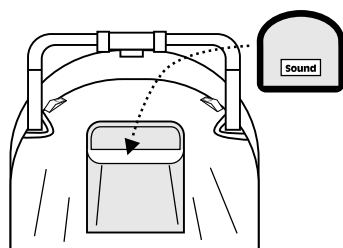

CAUTION

Be sure to test the volume on your player. Set it at a comfortable level so that it does not startle your baby when turning it on. Loud volume can hurt your baby's ears. If you notice that the sound has become weak or distorted or if tracks do not change, this is an indication that your batteries are low. Replace the batteries and set the volume at a comfortable level.

CAUTION

Before folding your stroller, be sure to remove your player from the back pocket of the canopy. This will make it easier to fold the stroller.

When you fold the stroller, you may leave the speakers in the Acoustic Canopy, but only for short periods of time.


In the summer, the temperature may get as high as 212°F/100°C or more. Do not leave your stroller, with the speakers in the Acoustic Canopy pockets, in your car trunk where the temperature may reach high levels. Store speakers in a cool and dry area.



WARNING:

To avoid serious injury keep stereo speakers and cords out of reach of children.


Using the Swivel Wheels

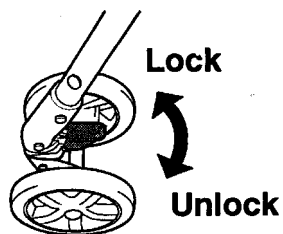

To lock swivels, lift both swivel lock levers up.

To unlock swivels, push both swivel lock levers down.

Using the Brakes

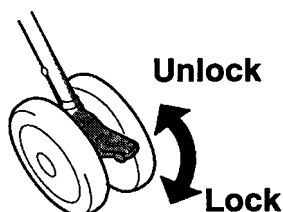


CAUTION

Push the stroller forward to ensure that the brakes are properly engaged.

To lock brakes, push both brake levers down.

To unlock brakes, lift both brake levers up.

Using the Reclining Backrest

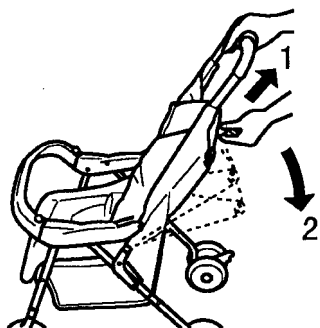

1. Press the lever at the top of the seat to the left.
2. Adjust the backrest gently to any of three positions.

To return the backrest to the upright position, simply lift the backrest gently into place.

CAUTION



Be careful when reclining the backrest while baby is in the stroller to prevent abrupt changes in seating position.

! WARNING

Child may slip into leg openings and strangle. Never use seat in reclined position unless the permanently attached safety cover is used.

* To attach the safety cover, see instructions on page 4.

Using the Guardrail

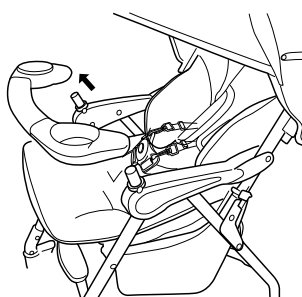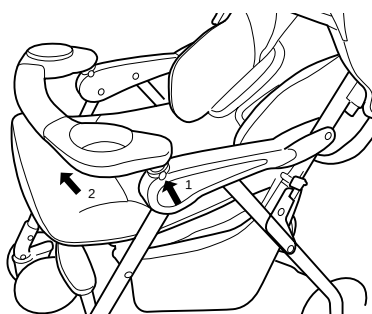

1. Squeeze the guardrail release buttons on both sides to release the guardrail.
2. When one side is released, the guardrail will pivot to allow easy access to the seating area.

3. When both sides are released the guardrail can be removed.
4. To attach the guardrail slip it over the armrest pins until you hear the pins click into position.

CAUTION


When the baby is in the stroller, only pivot the guardrail down, never up.



Using the Safety Cover

CAUTION


Before folding the stroller, unfasten and store the safety cover under the seat. The stroller will not fold with it attached.

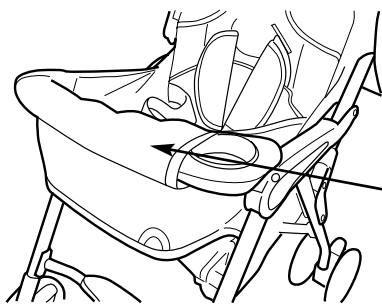

Installing the Safety Cover

1. Lift the seat cushion and pull safety cover out.
2. Place the safety cover over the guardrail and secure it with the velcro.

Using the Leg Extension

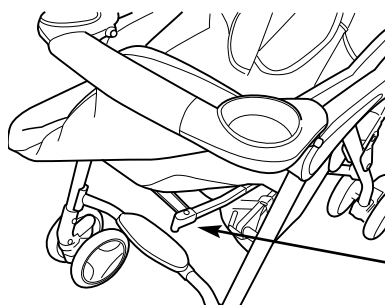


1. Lift the seat cushion and locate the leg extension.
2. Pull out the leg extension.


When not in use, push the leg extension back to the original position.

Leg extension

Using and Adjusting the 5-Point Harness

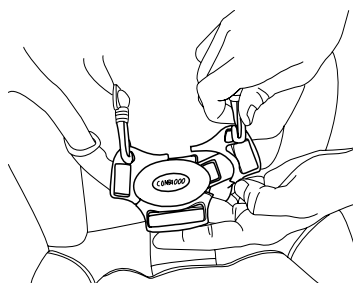

1. Place the crotch belt between the baby's legs.
2. Insert both waist belt buckles into the middle plastic piece.
3. Attach each shoulder strap's hook to the top of the waist belt clips.
4. To adjust the harness or waist belt, loosen the slack on both sides of each buckle.

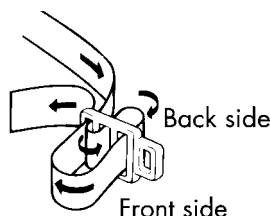

WARNING


Avoid serious injury from falling or sliding out. Always use harness.

CAUTION


Even when the seat belt is fastened, be careful not to let the child slip out or stand.

Folding the Stroller

1. Fold the canopy by lifting up on the canopy levers.
2. Remove your player from the back pocket of the canopy.
3. Place seat in the upright position.
4. Lift up and hold the fold release levers located on each side near the top of the handle. Then, tilt the stroller backward until it starts to fold.
5. Grip the handle at each side and turn inward to fold. The folding latches located under the seat of the stroller will lock together automatically.

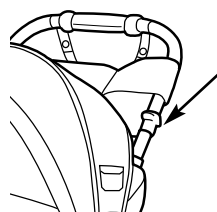


Fold Release Lever

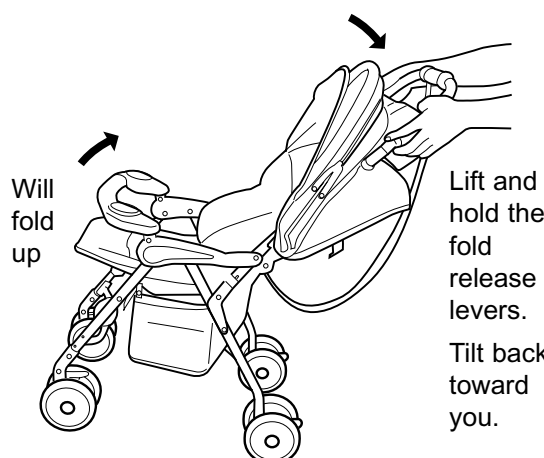


Will fold up

Lift and hold the fold release levers. Tilt back toward you.

Turn inward to fold.

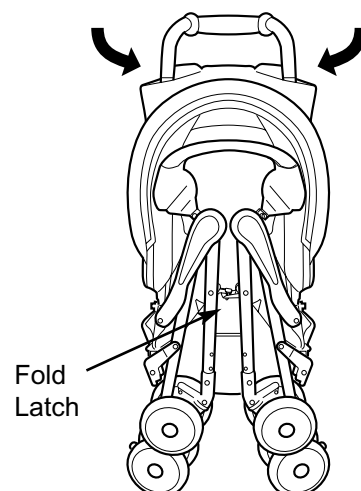

Removing/Attaching the Seat Cushion

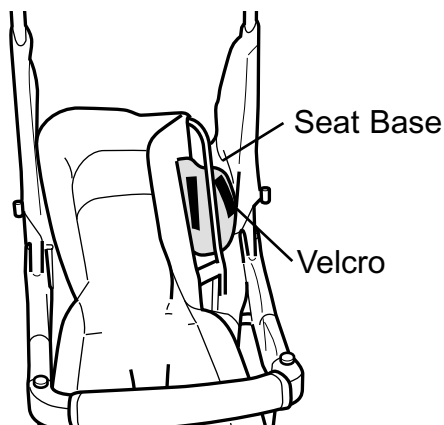

CAUTION

If seat cushion is ripped or torn, do not use.

Do not use the stroller without the seat cushion.




Removing the Seat Cushion

1. Unbuckle the 5-point harness and pull the straps out from seat cushion.
2. Grasp the seat cushion at the top and unfasten from the velcro.

Attaching the Seat Cushion

1. Pass the 5-point harness straps through the appropriate locations in the seat cushion.
2. Wrap the attached supplemental pads around the reclining frame tube and firmly attach to the velcro on the seat base to fasten.

Using the Basket

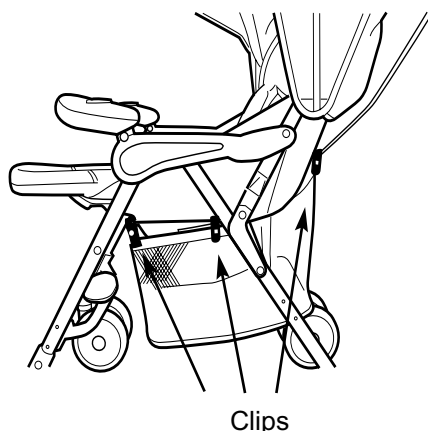

Removing

Unfasten clips on front and side of basket.


Attaching

Reverse the procedures for **Removing**.

CAUTION

Do not place more than 12 lbs. in the basket. Remove all items from the basket before folding the stroller.

Using the Stroller Pack

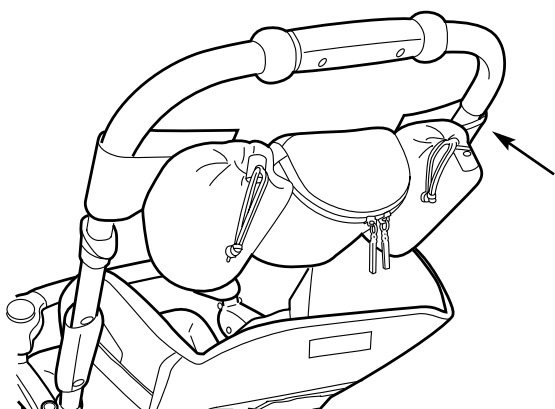

Attaching

Hook the clips into the slots on the handle and wrap the velcro straps around the handle.

Removing

Unfasten the velcro straps and unhook the clips.

CAUTION

To avoid burns, do not put bottles/cups with hot liquids in the stroller pack. Do not place more than 2 lbs. in the stroller pack. Remove all items from the stroller pack before folding.

The Perfect Match™ Guardrail & Carrier Attachment Strap

The following current brands and models can be used with the Perfect Match™ Guardrail.

Graco®: Snug Rider®, Snug Rider DX5®

Century®: Smart fit - Supreme®, Assura®, Smart Fit Plus 22®, Smart Fit Plus 22V®, Smart Fit Elite®, Avanta SE®, Avanta DX®

Evenflo®: On My Way®, On My Way Position Right®, On My Way Position Right V®

Cosco®: Opus 35™

Trade name and trademarks of Graco®, Century®, Evenflo® and Cosco® are the property of their respective owners and no endorsement of or approval by them is intended or implied. All COMBI® Perfect Match™ strollers are compatible with all of the Graco®, Century®, and Evenflo® infant car seat/carrier models and the Cosco® Opus 35 as of the date this printing was prepared.

Copyright October 2001 COMBI International Corp.


WARNINGS

-  When infant car seat/carrier is in the stroller, always fasten the Carrier Attachment Straps.
-  If unable to firmly attach Perfect Match™ Guardrail (as per instructions), discontinue use and contact COMBI Customer Service.
-  The Perfect Match™ Guardrail is only to be used when attaching infant car seat/carriers. Do not use for any other purpose.
-  Do not lean on or hang things from the Perfect Match™ Guardrail.
-  To assure safety for the baby, please refer to the manufacturer's instructions for use of your infant car seat/carrier.
-  When not being used with an infant car seat/carrier, please attach and use the standard guardrail.
-  If unable to securely attach infant car seat/carrier using the Perfect Match™ Guardrail, discontinue use and contact COMBI Customer Service.
-  Do not lift stroller by using infant car seat/carrier handle.
-  Discontinue use if fraying or damage is noted to Carrier Attachment Strap.

Using the Perfect Match™ Guardrail

CAUTION



Pull on each side of Perfect Match™ Guardrail to make sure that it is completely attached.

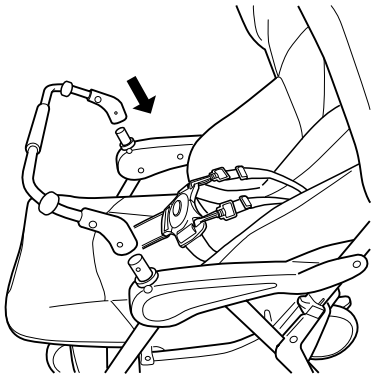

ATTACHING THE PERFECT MATCH™ GUARDRAIL


1. Remove standard guardrail and attach Perfect Match™ Guardrail.

Keep Positioning Rings toward the ends of the guardrail.

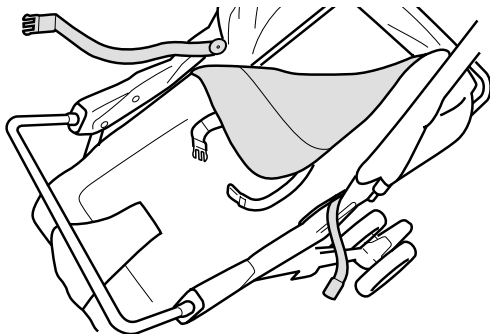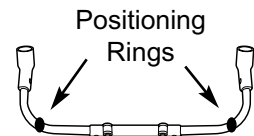

2. Recline the backrest to the middle position. Pull the Carrier Attachment Straps from behind the seat cushion and lay them over the armrests.

Note: When using the Evenflo® infant car seat/carrier it may be necessary to leave the backrest in the upright position to provide the proper recline angle on the infant seat/carrier

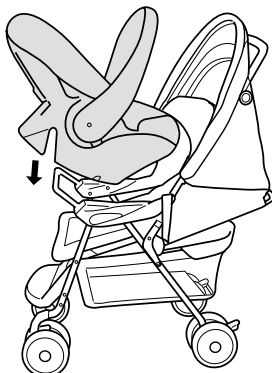


3. Hook carrier over the Perfect Match™ Guardrail and rotate until the infant car seat/carrier is solidly against the stroller.

Push the positioning rings snugly against the each side of the car seat/carrier.



4. Bring the Carrier Attachment Straps through the slots in the infant car seat/carrier and fasten the buckle. (If the strap is the incorrect length, adjust as needed. To adjust, thread fabric through each side of the buckle.)

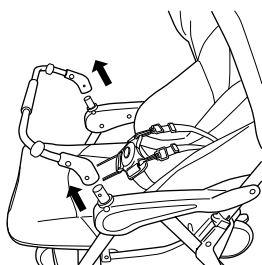

REMOVING THE PERFECT MATCH™ GUARDRAIL

1. Remove the infant car seat/carrier by reversing the above steps.
2. Press the buttons on the underside of the armrest (as shown) while pulling on the guardrail to remove.

Trade name and trademarks of Graco®, Century®, Evenflo® and Cosco® are the property of their respective owners and no endorsement of or approval by them is intended or implied. All COMBI® Perfect Match™ strollers are compatible with all of the Graco®, Century®, and Evenflo® infant car seat/carrier models and the Cosco® Opus 35 as of the date this printing was prepared.

Copyright October 2001 COMBI International Corp.

COMBI

PDF downloaded from http://www.thepdfportal.com/ultra-savvy-model2730_23917.pdf

COMBI International Corporation • 199 Easy St. • Carol Stream, IL 60188 • www.combi-intl.com
Customer Service 1-800-992-6624 • 10:00 a.m. - 5:00 p.m. Central Standard Time • Monday - Friday

Using the Infant Car Seat Cover and Canopy Cover

WARNING


Before using the infant car seat cover, please read and follow instructions from the infant car seat maker for safe use of your infant car seat.

CAUTION



Please read and follow instructions from the infant car seat maker for safe use of your infant car seat.

Place the provided seat cover over the seat cover in your infant car seat. Do not remove the original seat cover.

ATTACHING THE INFANT CAR SEAT COVER

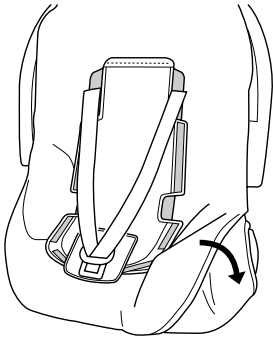

1. Unbuckle the safety straps on the infant car seat and place the seat cover on it with the sewn portion of the fabric flap to the top.
2. Lift up the flap, pull the belts out. Feed the flap through the belts and fasten the flaps using the velcro strips.
3. Place the elastic fastening strap at the bottom of the cover, underneath the handle and around back of infant car seat/carrier to hold the seat cover in place.

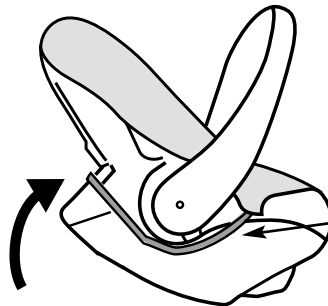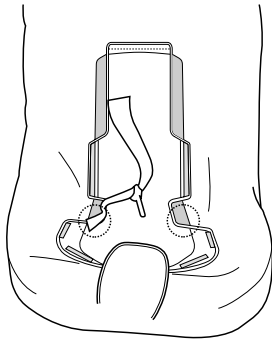


Elastic fastening strap

REMOVING THE INFANT CAR SEAT COVER


Release the elastic fastening strap from the carrier and remove the seat cover.

ATTACHING THE INFANT CAR SEAT CANOPY

Note: The infant car/seat carrier canopy can be used with or without the original infant car/seat carrier canopy.

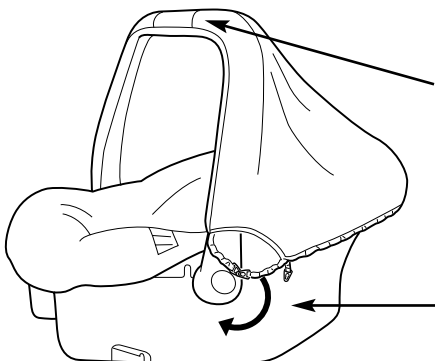

1. Place the canopy cover over the handle of the infant car seat/carrier. The top of the handle should show through the small cut out in the cover.
2. Pull the elastic straps around and underneath the bottom of the handle.

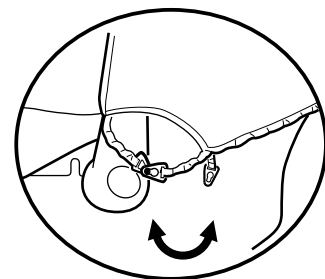

3. Clip the front and back elastic straps together to secure the canopy.

REMOVING THE INFANT CAR SEAT CANOPY

Unclip the elastic straps and pull the canopy off the infant car/seat carrier.

Routine Maintenance

STORE IN A COOL AND DRY AREA, especially in the summer. Do not store the stroller in the trunk of a vehicle.

SEAT CUSHION, INFANT CAR SEAT COVER/CANOPY

The seat cushion is machine washable. Set to gentle cycle using warm water and a mild detergent. Do not use bleach. Lay seat cushion and canopy and car seat covers flat to dry in shaded area. Do not machine dry. To prevent color fading, do not leave soaking for a long period. If the seat cushion is frayed or unraveling, discontinue use and call customer service for further instruction.

CANOPY, SEAT BELT, FIXED BASE SEAT, STROLLER PACK AND BASKET

Hand wash with brush. Wipe out excess water with a dry cloth and dry in a shaded area. For stubborn dirt, dilute a mild detergent then apply directly to the dirty area. Wipe out the detergent.

MAIN BODY

Briskly wipe off any mud and dirt. To clean the body, wipe with a damp cloth then wipe out any traces of moisture on the body with a dry cloth. The main body might become moldy and musty if not wiped dry.

Excessive exposure to the sun could cause premature color fading of stroller plastic and fabric.

SWIVEL WHEELS


After prolonged normal use, the wheels of your stroller may not swivel as easily as when the stroller was new. This is usually due to a buildup of dirt in the swivel mechanism. Before adding lubrication, test the swivel action to determine whether lubrication is necessary. Using compressed air* aimed at point **(a)** and **(b)**, blow dirt from the swivel mechanisms. **Do not use soap and water to wash wheels.** Periodically check that all screws, bolts and nuts are tight.

ADDING LUBRICANT

Avoid lubricating the swivel wheels whenever possible. Excessive lubrication or adding lubricant to swivel wheels when new may cause them to develop a shimmy or wobble that may quicken their deterioration. Add lubricant (silicone*) to **the swivel shaft** in small amounts.

Do not use cooking oil or WD-40 because oil attracts dust and would hinder the movement rather than improve it.

*Compressed air and silicone spray are available in varying size cans at most hardware stores.

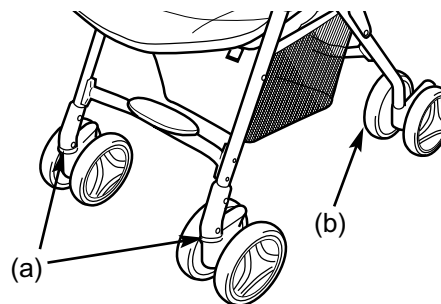

Trouble Shooting

STROLLER WON'T FOLD


- Check to see that the seat belt is not caught in the side.
- Make sure front swivels are locked.
- Make sure the backrest is in the upright position.
- Remove all items from the basket.
- Clean wheels and lubricate if necessary.
- Remove your player from back pocket of the canopy.

DIFFICULT TO STEER/STROLLER PULLS TO ONE SIDE

- Remove any items hanging from the handle.
- Make sure weight in basket is distributed evenly.
- Check that the brakes are not in the locked position.
- Clean wheels and lubricate, if necessary.

DIFFICULT TO GET UP CURBS

- Pulling stroller backward makes going up a curb difficult, and could pose a safety hazard. Pull the handle up to lift the rear wheels onto the curb, then pull the stroller backward until the front wheels clear.

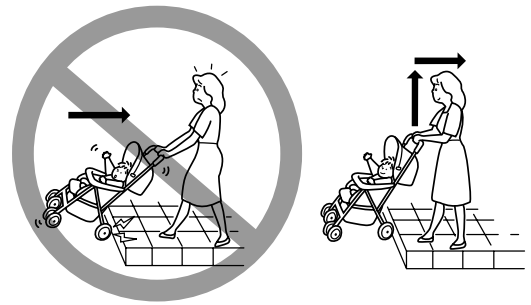

We have moved - Effective 2/7/04

Combi

Combi USA, Inc.

1962 Hwy 160 W, Ste. 100
Fort Mill, SC 29708

1-800-99-COMBI M-F 8:30am-5pm EST
803-548-3663 FAX

New SC
Sales Tax
is 5%

Form

Ultra Savvy™ 2730 Series

Acoustic Canopy

Patent Pending

Perfect Match® Stroller



If you would like to place an order for the following parts, please fill out the form below and return it to the following address:

~~COMBI International Corporation~~
~~Attn: Customer Service Department~~
~~199 Easy Street~~
~~Carol Stream, IL 60188~~

or ~~Fax this completed form to us at~~
~~**630-871-0606**~~

IMPORTANT: We must have this information to process your order:

Model Number: 2730 - _____ Color & Pattern of Fabric: _____

Parts List for the Ultra Savvy™ (2730 Series) only.

	Price	Quantity	Total
1. Canopy	\$ 35.00		
2. Basket	20.00		
3. Seat Cushion	30.00		
4. Standard Guardrail	15.00		
5. Perfect Match™ Guardrail	10.00		
6. Stroller Pack	15.00		
7. Infant Car Seat Cover	12.00		
8. Infant Car Seat Canopy Cover	8.00		
9. Carrying Strap	12.00		
10. Acoustic Canopy Speaker Set	10.00		
	Amount of Order		
	Sales Tax (7.25%) (IL residents only)		
	Total		

If you need to order other parts for your stroller, please call us toll-free at 1-800-992-6624.

Shipping and Handling Fees: Add \$8.00 for orders \$34.99 and under. Add \$13.00 for orders \$35.00 and over. Note: Additional shipping charges will apply outside of the Continental U.S. Combi USA reserves the right to change pricing at any time.

Ship To:

Customer Name

Street Address

Street Address

City, State, Zip

Telephone Number

☐ **Charge to my credit card:**

☐ VISA

☐ MASTERCARD

☐ AMERICAN EXPRESS

☐ DISCOVER

Card Number

Expiration Date

-

Cardholder's Signature

☐ **Check enclosed**

9/3/2003